


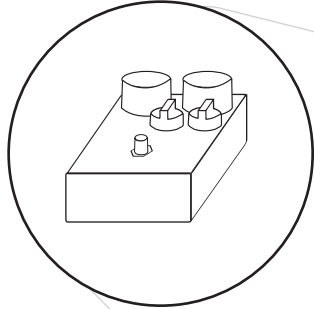

angelbaby

echoczar modulation device

instruction diagram



note: the angelbaby does not use batteries and does not have a power jack the angelbaby is powered by the echoczar through the connecting TRS (stereo) cable

ACTUAL SIZE

4 1/4" deep
3 1/4" wide
2" tall

MODE SWITCH

choose between 3 chorus voices:
SOLO (single voice) traditional sound, use with short delay times
DUET (two voice) provides more pitch variation, use with fast rates
TRIO (three voice) provides an ensemble sound, use with medium fast rates

DELAY 2 (red LED Off)

sets the Delay Time of the echoczar's Delay 2 (yellow channel)
note: when the angelbaby is connected, the echoczar's Delay 2 (yellow channel) Delay Time knob is completely bypassed

DEPTH

controls the amount of Wow and Flutter (modulation) that is present in the repeats the echoczar's dry signal is not affected, only the repeats

MODULATION OUTPUT JACK

connect only to echoczar's Delay 2 (yellow channel) Delay Time Expression Jack use TRS (stereo) cable

FOOTSWITCH

selects between Delay 2 (yellow channel) and the angelbaby modulation mode Delay 3 (red channel)

On (RED LED)
flashes in time to the rate setting when Delay 3 is selected by footswitch

DELAY 3 (red LED On)
sets the Delay Time of the angelbaby modulation mode

RATE

adjusts the speed of the sweep from one complete sweep every three seconds to 15 sweeps every second (0.3 hz to 15 hz)

EXPRESSION PEDAL INPUT JACK

controls Delay 2 (yellow channel) Delay Time via Expression pedal when the angelbaby is footswitched to the Delay 2 mode (red LED Off) use TRS (stereo) cable

