




powerglide

two-speed tremolo

instruction diagram

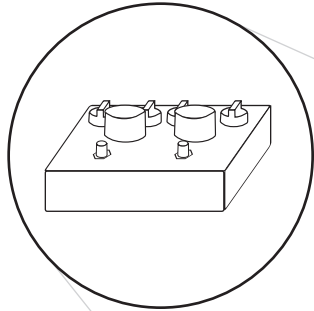

DEPTH 1 & DEPTH 2

individual Depth knobs for Speed 1 and Speed 2
for example: Speed 1 may be set slow, at max Depth (5:00)
for a severe on-off chop and Speed 2 may be set fast at
medium Depth (12:00) for a softer warble

YELLOW LED

flashes in time when Speed 1 is selected

VOLUME

adjust to taste
unity gain is approx 12:00

On (RED LED)

WAVEFORM MODE SELECT (switch)
(GLOBAL) 3 position

Up - for deep swaying brownface-style trem
Middle - for smooth even blackface-style trem
Down - for full on-off square-wave chop

selects On or Bypass
hardwired, true-bypass switching

EXPRESSION PEDAL INPUT
speed control for Speed 1 (Yellow)
Ramp knob becomes damping control
to smooth out Expression pedal movement

GREEN LED
flashes in time when Speed 2 is selected

RAMP
instant glitchless speed change between
Speed 1 and Speed 2 on MIN Ramp
MAX Ramp allows 3 to 5 seconds to ramp
up to the fast Speed setting, 10 seconds to
ramp down to the slow Speed setting

ACTUAL SIZE

4" deep
5 3/4" wide
2" tall

